

## XC3-20500-RF

### Cool/Warm White Controller

Cool/Warm White  
Controller  
**XC3-20500-RF**

#### Product Features







- 2-Channel, 5A MAX per channel.
- Cool white and warm white dual controller.
- 8 levels of brightness and 256 grayscale levels.
- Remote control has touch buttons and a color control ring which makes it easy to select colors.
- The RF remote control distance is 33 feet.
- Remote Control requires 3 AAA batteries (Not included).
- Ergonomic and Compact.

#### Product Specifications

- |                         |  |
|-------------------------|--|
| • Input Voltage         | 12-24VDC   |
| • Output Current        | 5A * 2-Channel   |
| • Output Power          | 12V: 120W; 24V: 240W                                   |
| • Remote Power          | 3 AAA Batteries  |
| • Remote Type           | RF   |
| • Operation Temperature | -35 to 55 °C   |
| • Controller Dimensions | (L)65 x (W)64 x (H)24 (mm), 2.56 x 2.52 x 0.94 (inch)  |
| • Remote Dimensions     | (L)114 x (W)55 x (H)21 (mm), 4.49 x 2.17 x 0.83 (inch) |
| • Weight                | 93g  |



#### Remote Control Buttons

	<b>On/Off:</b> Turn On/Turn off.
	<b>Warm White Mode:</b> 100% Warm White and NO Cool White.
	<b>Cool White Mode:</b> 100% Cool White and NO Warm White.
	<b>Brightness+:</b> Increases brightness level. (Total of 8 levels)
	<b>Brightness-:</b> Decreases brightness level. (Total of 8 levels)
	<b>Color Ring:</b> Move your finger around the color ring to select a color.





# XC3-20500-RF


## Cool/Warm White Controller

### Remote Sync:

Each remote has a unique ID code and a range of about 33 feet. A LED controller can memorize up to 20 remote ID codes at one time. If there are more than 20 ID codes, the oldest code will be deleted. The power off memory function will retain the last ID code and set the scene accordingly.

- **To Sync a LED controller with a remote:** Power up the controller then press and hold the  (Brightness+) button for 3 seconds. If the synchronization is successful, then LED light will blink 3 times.
- **Clear ID code in controller:** You can clear a code from an LED controller by powering up the controller, and then, press the  (Brightness+) button 6 times within 3 seconds. If successful, the LED light will blink 6 times.

## Connection Instructions

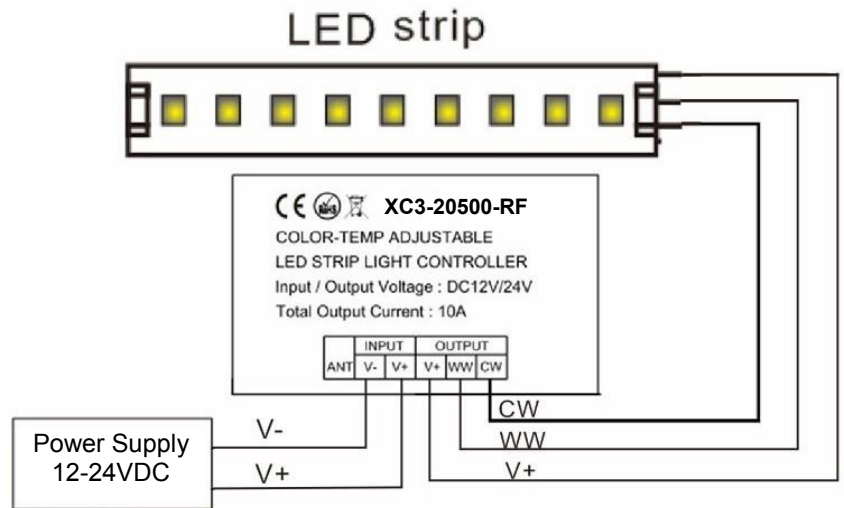

## Troubleshooting Guides

Problem	Reason	Solution
All lights are off with power on.	No Power.	Check the power source.
	Dimmer protection function is triggered.	Check error and reconnect the power cord.
	Power cord is not connected properly.	Reconnect the power cord.
Remote control has no response.	Battery is not installed properly.	Re-load the battery.
	Beyond the remote distance.	Move remote closer to the dimmer.
Remote responds so slow.	Battery power is low.	Change to a new battery.
Abnormal flicker.	Wires are too long.	Shorten the wires or use loop power supply.
	Wire's diameter is too small.	Use a bigger wire.
	Dimmer or power supply is overloaded.	Add more signal amplifiers.
Signal Confusion.	Interfered by another remote.	Clear ID code list in dimmer (See <b>Remote Sync</b> on top).